


## VK PS pressure switch adjustment

To begin adjusting, unscrew the pressure switch from the bracket. Then loosen or tighten the adjustable screw underneath the unit

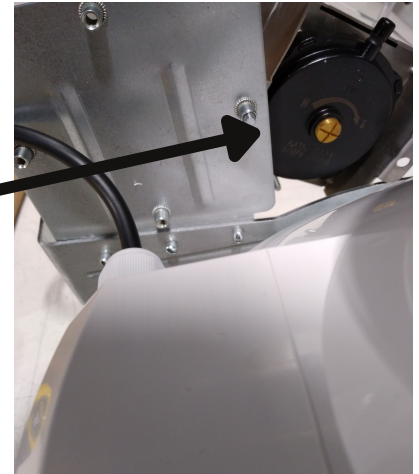



Remove  
the  
screw




Turn to reveal  
the adjusting  
node


**If your fan runs continuously even after your dryer turns off**

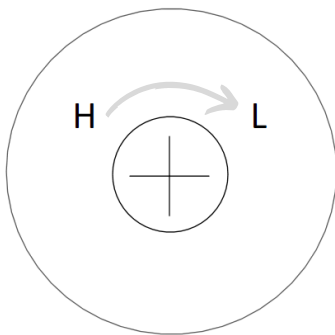

Turn the screw  counter-clockwise (**towards the H**) to reduce the sensitivity of the pressure switch. Turn one half to one full turn. Continue turning until the correct calibration for dryer is achieved.

**If your fan does not run when the dryer is on**

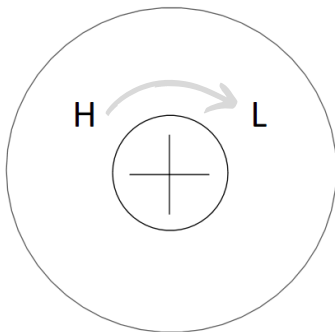

Turn the screw  clockwise (**towards the L**) to increase the sensitivity of the pressure switch. Turn one half to one full turn. Continue turning until the correct calibration for dryer is achieved.

**Please note:** The pressure switch runs in 10 minute repeat cycles. Every 10 minutes the booster fan stops for 15 seconds. If the pressure still exists another cycle begins. If the dryer stops during the cycle, the booster fan will complete the 10 minute cycle it had started before the dryer stopped.