


**MV 120 Vs**  
**MV 150 Vs**

**INSTALLATION**


TOOLS REQUIRED

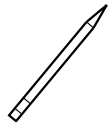


Pencil



Drill

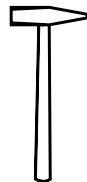

Hammer

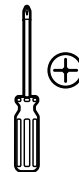

Screwdriver




Dowel 4 pcs




Screws 4 pcs


1 DISASSEMBLE THE HOOD

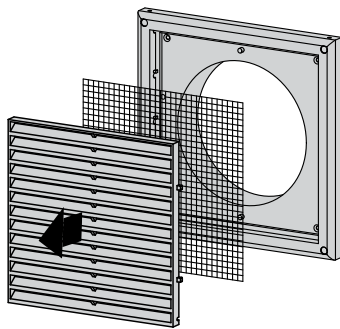


2 MARK FASTENING HOLES USING THE FRAME

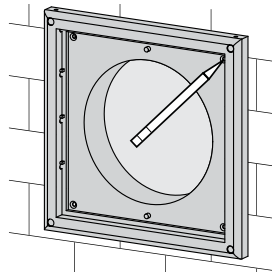


3 DRILL HOLES ON THE MOUNTING SURFACE ACCORDING TO THE MARKING

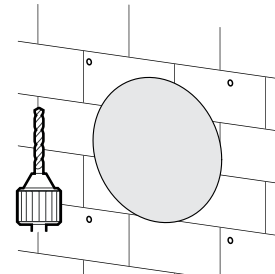

4 INSERT THE DOWELS IN THE HOLES.

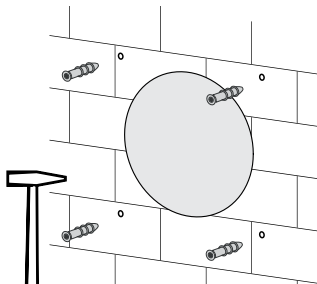

5 FIX THE FRAME ON THE MOUNTING SURFACE WITH SCREWS.

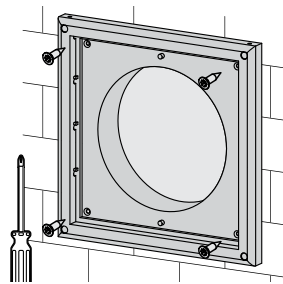

6 INSTALL THE FILTER AND FIX THE HOOD ON THE FRAME USING THE "SNAP IN PLACE" FEATURE.

